

# **LM Series**

## **Low Mass Boiler**

### **LM Boiler LMD, Direct Vent Boiler**

**Installation  
Operation  
Maintenance  
Manual**



## **Thermo-Dynamics Boiler Company**

155 ROUTE 61 SOUTH • SCHUYLKILL HAVEN, PA 17972


TEL (570) 385-0731 • FAX (570) 385-5304

WEB [www.thermodynamicsboiler.com](http://www.thermodynamicsboiler.com) • EMAIL [sales@thermodynamicsboiler.com](mailto:sales@thermodynamicsboiler.com)



## PRODUCT FEATURES

- ASME Coded Boiler Registered with National Board
- Factory Mounted/Wired Burner and Controls
- Fully Insulated Heat Exchanger with Powder-Coated Cabinet
- Burner swings for easy cleaning
- Equipped with Hydronic Control, Circulator, and Temperature / Altitude Gauge
- Outfitted with Additional Nozzles to Achieve a Variety of Heat Inputs
- Provided with a Lifetime Limited Warranty
- Oil Vent Damper for improved efficiency

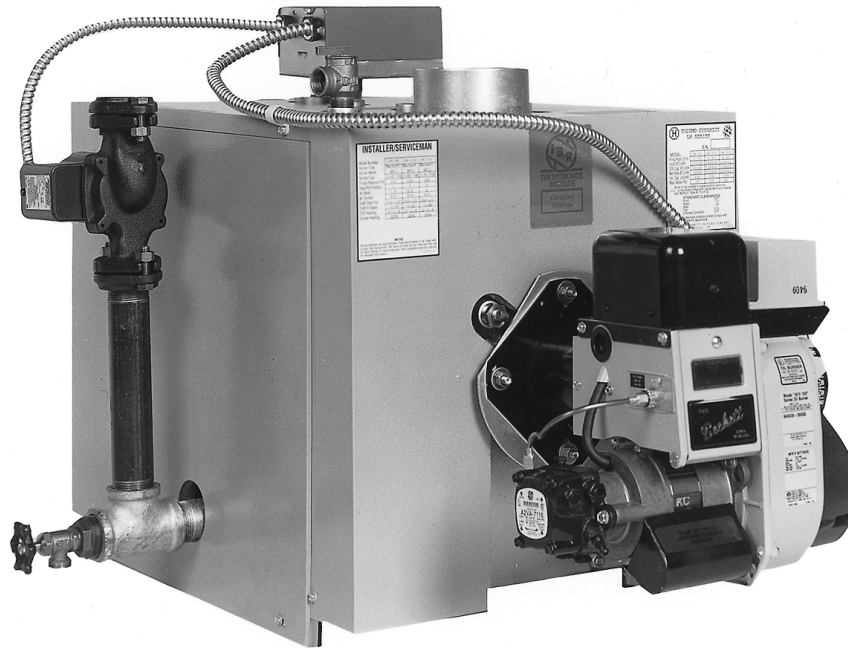

## CONTENTS

Service Policy	2
Homeowner Information	3
Heating Contractor Information	4
Model Specifications	5
Installation	6
Operation	15
Maintenance	17
Trouble Shooting	18
Parts List	25
Preliminary Settings	26
Burner Service Set-Up Records	Back Cover

## **SERVICE POLICY**

Congratulations on the purchase of your boiler. Here at Thermo-Dynamics Boiler Company we pride ourselves on the design and construction of our product. Our intent is to furnish you with a high quality appliance that will provide you and your family with years of trouble free service.

In order to maintain peak performance of your boiler, it is recommended that the burner/boiler be serviced annually, preferably prior to the onset of the winter heating season. Servicing of your appliance must be performed by a qualified heating technician. You should utilize a qualified heating technician familiar with your installation to manage your boiler and perform periodic maintenance. Proper care and maintenance of your boiler will allow you to enjoy the benefits of your new purchase as well as extend its long useful life.

In the event that your serviceman encounters difficulty with the boiler, he/she shall contact the distributor from which the product was purchased. The distributor shall, in turn, contact the Thermo-Dynamics sales representative for your area. By adhering to this protocol, Thermo-Dynamics wishes to provide you with responsive and unparalleled service. We realize the importance that our product means to you and your family and our goal is to get your boiler up and running as quickly as possible.

Thank you for purchasing the Thermo-Dynamics boiler. Again, it is our intent to provide you with a high quality trouble free product that will be part of your family for many years to come. Please consider Thermo-Dynamics Boiler Company in the future for all of your home heating needs.



# HOMEOWNER INFORMATION

Heating Contractor:

Address:

Phone No.:

## **A) General**

Installation and service is to be done only by a certified and qualified technician.

Never burn garbage or refuse in your boiler or leave combustible material around it. Do not allow the fuel tank to run out of oil. The fuel tank should be kept full during the summer, or periods of non-use, to prevent condensation of moisture on the inside of the tank.

## **B) Combustion Air Supply**

The burner requires an ample amount of clean combustion air to burn efficiently. If ample supply is not available, noisy and erratic combustion will result. Under these conditions fuel odors may occur. The installation and use of venting fans (anywhere in the house) or a vented dryer will greatly increase the need for outside air.

## **C) Area Around Boiler**

The area around the boiler must be kept clean and free of any combustible materials, particularly oily rags or papers. The boiler must be accessible for service.

## **D) Annual Tune-Up**

The boiler should be serviced once a year, ideally just prior to the heating season. The tune-up is to be done by a qualified technician following procedures listed under Maintenance in this manual

## **E) If Boiler Doesn't Start:**

- 1) Check if there is fuel in the tank.
- 2) Is the thermostat setting above room temperature.
- 3) Is the service switch in the "on" position.

Should there be a problem with operation of the boiler, call a qualified service technician. Do not tamper with the unit or controls. Working with a burner and setting-up the combustion process requires specific technical knowledge, skills and instruments. In addition, your boiler is only part of your overall home heating system. Other controls (etc.) may require adjustment or replacement.

## **F) Keep this manual in a safe place near your boiler as reference for your service technician.**

# HEATING CONTRACTOR INFORMATION

## Read This First

1. *Installer must be a trained, experienced technician and should read all instructions before installation.*
2. *Inspect the boiler, jacket and all components to be sure damage has not occurred in shipment. If damage is evident, do not install the boiler. Contact your distributor immediately. A claim must be filed with the freight carrier that transported the boiler from the factory to the distributor.*
3. *Disconnect power supply before connecting wiring.*
4. *Refer to local codes for oil burning equipment, for recommended installation practice. You will need to be familiar with NFPA Standard 31, "Standard for the Installation of Oil Burning Equipment".*
5. *A complete heat loss calculation is necessary to choose the proper size unit to install. The boiler should be sized to within 25% of the actual heat loss of the structure. Over sizing will result in short cycling and inefficient operation.*
6. *When moving the boiler, do not push against the jacket or burner. Damage will result.*
7. *If the boiler is vented to a chimney, be certain the chimney is clean and free of obstructions. The chimney must be masonry with tile lining or metal insulated with a stainless steel surface. The chimney must be properly sized. Draft requirements are essential for safe and proper operation of the boiler.*
8. *If the boiler is connected to a venting device, make sure that it is listed by a recognized testing service. Follow the venting device manufacturer's installation instructions. Verify that the venting device installation complies with the recommendations of the manufacturer and local and state codes.*
9. *Conduct a thorough checkout when installation is complete. Check for indications of leaks and make sure that no material is left adjacent to the boiler.*
10. *The use of low sulfur No. 2 heating oil is highly recommended.*
11. *Modification, substitution or elimination of factory equipped, supplied or specified components may result in property damage, personal injury, loss of life and void of factory warranty.*
12. *The following definitions apply to potential hazards noted in this manual.*


**DANGER:** *Indicates a hazardous situation which if not avoided will result in death or serious injury.*

**WARNING:** *Indicates a hazardous situation which if not avoided could result in death or serious injury.*

**CAUTION:** *Indicates a hazardous situation which if not avoided, may result in a minor injury. It may also warn against unsafe practices that may result in minor injury or damage to equipment.*

**NOTICE:** *Indicates that special attention to information is required. Not related to personal injury or property damage.*

# MODEL SPECIFICATIONS

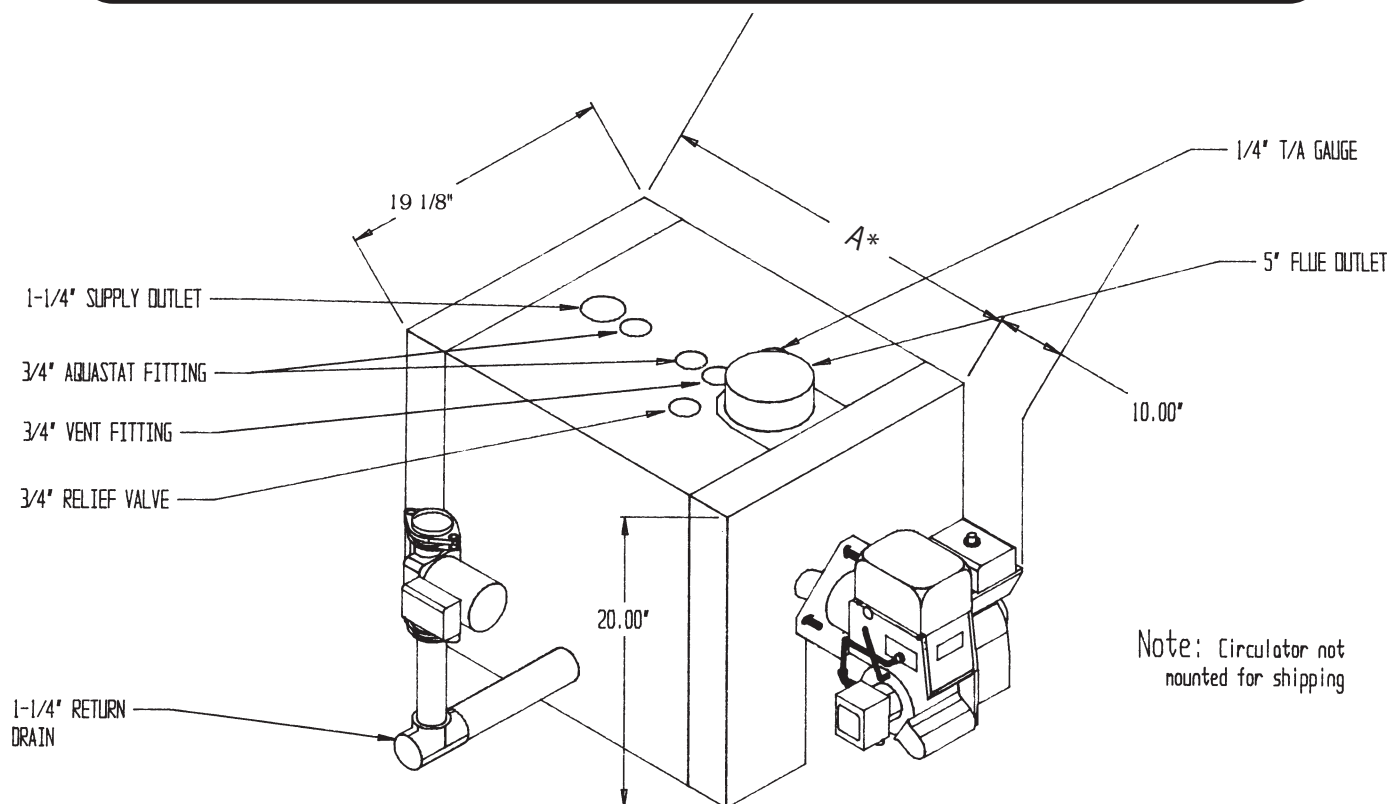

**FIGURE 1**

SPECIFICATIONS	LM-75 LMD-75	LM-85 LMD-85	LM-100 LMD-100	LM-110 LMD-110	LM-125 LMD-125
INPUT BTU/HR	105,000	119,000	140,000	154,000	175,000
HEATING CAPACITY BTU/HR	91,000	102,000	121,000	133,000	151,000
NET RATING BTU/HR	79,000	89,000	105,000	115,000	131,000
INPUT #2 OIL GPH	0.75	0.85	1.00	1.10	1.25
BOILER DRAFT LOSS INCHES	0 - +1.0	0 - +1.0	0 - +1.0	0 - +1.0	0 - +1.0
WATER CONTENT	5.5 GAL.	5.5 GAL.	8 GAL.	8 GAL.	8 GAL.
BOILER HEIGHT w/CONTROL	25"	25"	25"	25"	25"
JACKET WIDTH	19-1/8"	19-1/8"	19-1/8"	19-1/8"	19-1/8"
HYDRONIC SUPPLY HEIGHT	20-1/2"	20-1/2"	20-1/2"	20-1/2"	20-1/2"
BURNER HEIGHT	9-3/8"	9-3/8"	9-3/8"	9-3/8"	9-3/8"
HYDRONIC RETURN HEIGHT	5"	5"	5"	5"	5"
FLUE OUTLET DIAMETER	5"	5"	5"	5"	5"
*A = JACKET DEPTH	25-1/2"	25-1/2"	35"	35"	35"
RETURN HEIGHT	5"	5"	5"	5"	5"
HYDRONIC SUPPLY SIZE	1-1/4"	1-1/4"	1-1/4"	1-1/4"	1-1/4"
HYDRONIC RETURN SIZE	1-1/4"	1-1/4"	1-1/4"	1-1/4"	1-1/4"
DOE AFUE RATING	86.2	86.0	86.4	86.2	86.0

## INSTALLATION/QUALIFIED HEATING CONTRACTOR ONLY

### A) GENERAL

The installation of the unit shall be in accordance with state and local regulations.

### B) FREIGHT CLAIMS

All units should be inspected for damage upon arrival. Concealed damage claims should be filed immediately against the carrier by the consignor. The carrier is responsible for taking prompt action on all claims.

### C) SIZING

Replacement boilers should not be sized from the firing rate of the old boiler; a DOE sponsored study indicated 65% of the heating units in U.S. homes are substantially oversized. A complete heat loss calculation of the structure is necessary to choose the proper size unit to install. The boiler should be sized to within 25% of the actual calculated heat loss of the structure. Over sizing will result in short cycling and inefficient operation.

### D) BOILER LOCATION

- 1) Boiler to be installed in a level position with clearances in accordance with NFPA 31 Table 10.6.1.

**STANDARD CLEARANCES**

Model	LM 75/85	LM 100/110/125
Front	12"	24"
Sides	2"	6"
Rear	2"	6"
Chimney Connector	9"	18"
Floor	Approved for installation on combustible flooring.	


- 2) Reduced clearance installations shall comply with NFPA 31 Table 10.6.2.
- 3) To move the unit, push against the flue outlet or skids. Pushing or pulling the jacket or burner will result in damage.
- 4) Be sure to level the unit by inserting shims under the elevated base.
- 5) TANK STAND ASSEMBLY - Figure 2. This series of boilers can be installed on the optional tank stand in order to minimize floor space requirements when using the boiler in conjunction with an indirect fired water heater.

The following procedure is required for the proper assembly of the tank stand:

- a) Place the stand top upside down on a level floor.
- b) Assemble the small cross braces by bolting them together through the center hole. Do not at this time completely tighten the bolts.
- c) Stand two of the legs up along the short side the top on the outside of the top. Fasten the cross braces through the legs and tighten all bolts. Repeat for the other side.
- d) Assemble the long side braces to the legs and themselves.

## INSTALLATION/QUALIFIED HEATING CONTRACTOR ONLY

Place the tank stand on a level floor in its proper location before setting the boiler on top. If the floor is not level be sure to level the stand by inserting metal shims under the tank stand legs. Once the boiler is positioned on the stand do not attempt to move the stand.

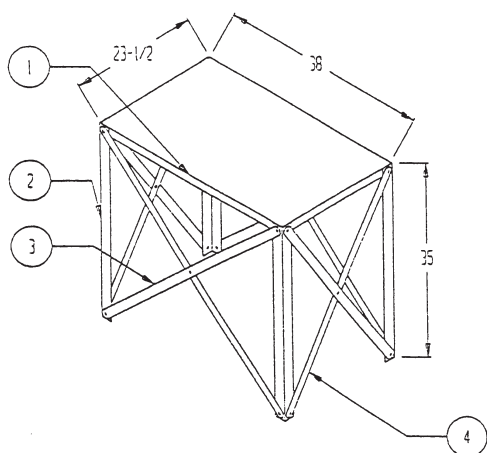

**FIGURE 2**

Item	Quantity	Description
1	1	Top
2	4	Legs
3	4	Large Cross Brace
4	4	Small Cross Brace
	20	3/8-16 Bolts
	20	3/8-16 Nuts
	20	3/8-16 Washers

- 6) **Pipe and Flange Leg Mounting.** The boiler base is supplied with two holes at each corner. Circulator flanges may be installed at each corner under the base using the holes in the base and the flange bolts. Use four sections of pipe of the same length, thread at each end and screwed into the flanges at the four corners to create legs. Finish the stand by installing flanges at the ends of the threaded pipes and securing the flanges to the floor using fasteners appropriate for the floor. The boiler may be leveled by screwing the pipes into or out of the flanges prior to securing the flanges to the floor.

### **E) AIR FOR COMBUSTION AND VENTILATION - CHIMNEY VENT APPLICATIONS**

The unit must be installed where provisions exist for combustion and ventilation air. Ordinarily, provisions may be furnished by the following methods.

#### **1. Utility Room or Closet**

In buildings of tight construction, including most modern homes, you should provide an opening, connecting to a well ventilated attic, crawl space or directly with the outdoors. The opening should have a minimum free area of 1 square inch per 1,000 Btu per hour of total input for all appliances in the enclosure and should terminate below the burner level. Boilers installed in confined areas or closets must have two ventilation openings in the closet door. Each opening should have a free area of not less than 1 square inch per 1000 Btu (140 square inch per US gph) of the total input for all appliances in the enclosure. One opening located near the top of enclosure and one near the bottom.

## **2. Basement**

- a. When a boiler is installed in a full basement, infiltration is normally adequate to provide air for combustion.
- b. In buildings of tight construction when the basement windows are weather stripped, one opening to a well ventilated attic or with the outdoors should be provided. (See part 1 for opening requirements)

## **3. Special Conditions**

When a boiler is located in an area where exhaust fans, kitchen ventilation systems, clothes dryers, or fireplaces may create conditions of unsatisfactory combustion or venting, special provisions should be made for additional air for combustion, as specified by local authority.

## **F) AIR FOR COMBUSTION AND VENTILATION - DIRECT VENT APPLICATIONS**

CAUTION: External vent surfaces are hot.

NOTICE: Use only the ETL listed venting system components supplied with the TV-175 Direct Vent Kit.

Surface discoloration of the building may occur due to improper boiler/burner adjustment. Thermo Dynamics Boiler Company will not accept any liability for such discoloration.

Follow the instructions provided with the TV175 Direct Vent Kit for locating and installing the vent kit.

## **G) JACKET AND TRIM ASSEMBLY**

### **1. Knock Down Boiler**

a. *Jacket Assembly* - Unpack the jacket parts being careful not to damage the finish. Piping and accessories are installed after the jacket is in place.

b. *Trim Assembly*

Install the safety relief valve in the 3/4" tapping in the top of the boiler. The relief valve should be piped to a safe place of discharge.

Install the limit control in the 3/4" fitting provided in the top of the boiler.

Install the altitude/temperature gauge in the 1/4" fitting provided on the top right of the boiler.

Install plugs provided in the parts box in all openings that are not used.

### **2. Packaged Boiler**


Controls and burner are installed and prewired at the factory. Install Relief Valve as noted in Figure 4.

## **H) BOILER PIPING**

This style of boiler is equipped with a built in "Air Scoop system" - Figure 3. This feature allows quiet air free operation of your hot water system by assuring the removal of noisy air pockets. The supply line or Riser tapping in the top of the boiler extends approximately 1"

below the top or waterline of the boiler, thus allowing only air free water to enter the supply to the heating system. The air trapped in the top of the boiler is then purged through a 3/4" vent tapping to be released with an (1) automatic float vent (2) a manual vent or (3) piped into a conventional type expansion tank.

Relief valve discharges and drain valve piping must be piped to a safe place of discharge. All plugs and water connections should be checked for leaks upon installation and annually. This series of boilers virtually eliminates all standby losses with its low water content. Because this boiler is also extremely efficient a bypass loop should be installed between the supply and return of the boiler to maintain boiler water temperature during a call for heat. Consult the piping diagram in this manual for typical bypass piping.

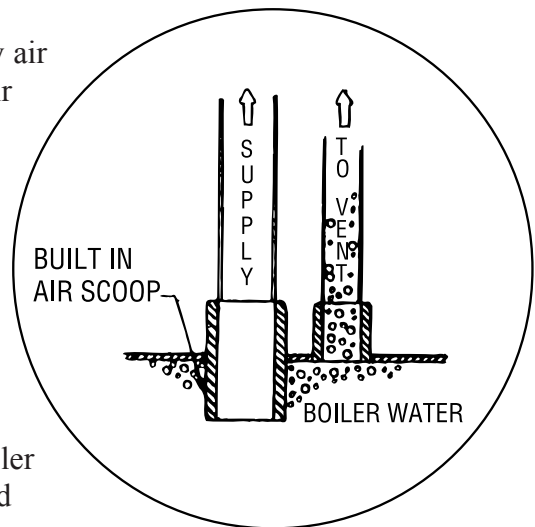

**FIGURE 3**  
**BUILT-IN AIR SCOOP**

Regulation of the bypass is accomplished by use of a gate valve installed in the loop or a thermostatic bypass valve. If a gate valve is used, it should be set to the full open position initially. Final adjustment of the gate valve should be done as the system stabilizes. The valves should only be closed down enough to ensure adequate heat to all system loops. If a thermostatic bypass is used, follow the manufacturers recommendations for installation.

Failure to install a bypass loop may cause excessive condensation causing premature failure of the boiler due to corrosion. This type of failure voids the warranty.

**WARNING:** Relief valve discharges and drain valve piping must be piped to a safe place of discharge.

## **I) STORAGE TANK PIPING**




The recommended locations of circulators, expansion tanks, etc. are illustrated in the piping diagrams included in this manual, Figure 4.

It is recommended that the indirect fired water heater be wired to give preference to the domestic water so that when the tank thermostat calls for heat the flow of heat to the rest of the house is turned off.

Always consult the tank water heaters installation and operation manual for proper supply piping sizes, location of T & P relief valve and any other information relating to the proper installation of the tank.

A thermal expansion tank may be required on those tanks which are equipped with check valves or back flow preventers on the cold water supply.

**FIGURE 4 - PIPING LAYOUT PREFERRED AND ALTERNATE METHODS**

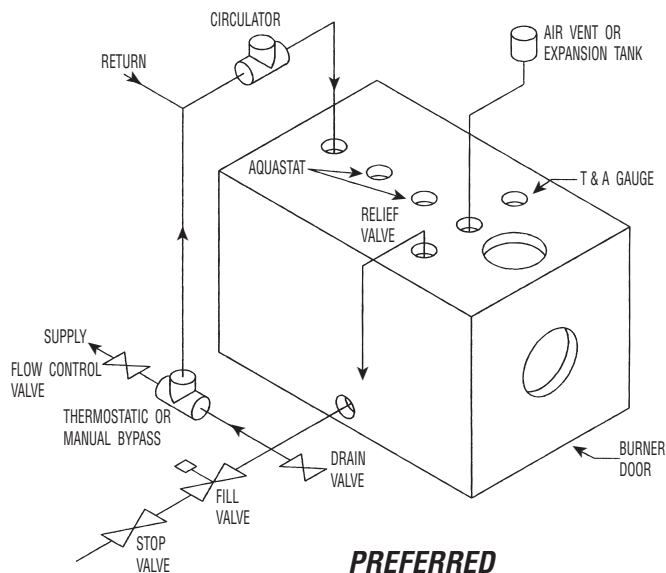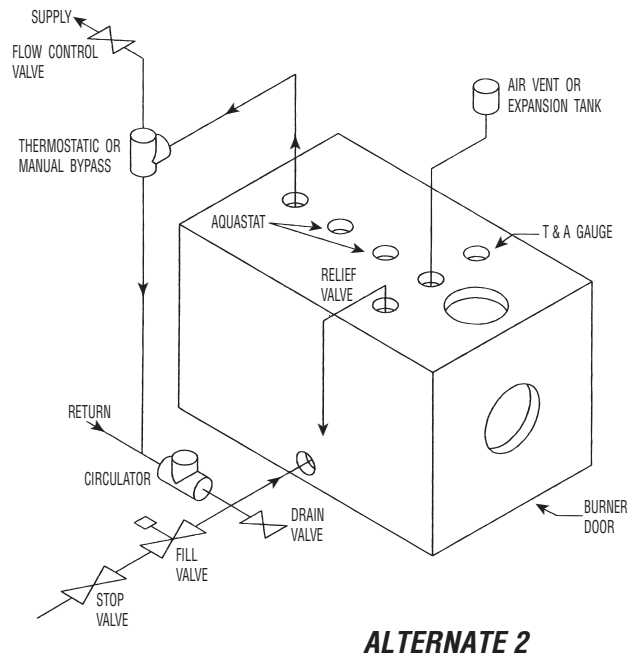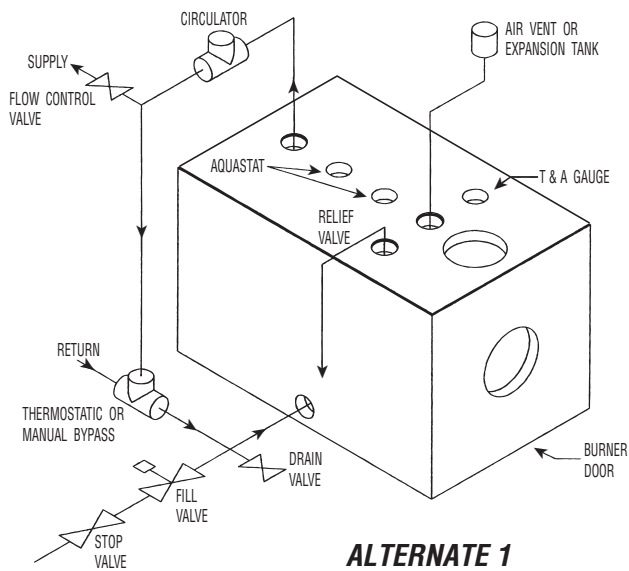

**NOTES:**

1. RELIEF VALVE MUST BE PIPED TO A SAFE PLACE OF DISCHARGE.
2. AIR VENT MAY BE PIPED TO NON BLADDER TYPE EXPANSION TANK.
3. A THERMOSTATIC BYPASS VALVE OR MANUAL VALVE MUST BE USED FOR A BALANCING VALVE.
4. THE FLOW CONTROL VALVE MAY BE REPLACED BY ZONE VALVES.
5. ALL PIPING MUST COMPLY WITH ALL STATE AND LOCAL CODES.
6. CONSULT HOT WATER TANK MANUFACTURERS LITERATURE FOR TANK PIPING.



## **J) BURNER AND CONTROLS**

### **1. Burner Installations**

Packaged boilers are shipped with the burner installed and prewired. Boilers that are shipped knocked-down must be field assembled. Follow the procedures listed below to install and connect the burner.

- a. Remove the burner parts and instructions from the carton.
- b. Referring to specifications at the back of the manual, check to see that the burner model and size match the boiler model.
- c. Make sure the correct nozzle is in place and is tightly sealed.
- d. Check the electrode position and set the air intake as indicated in the burner manual.
- e. The burner is installed with a mounting flange. The end of the burner air tube should be 1/4" from the inside surface of the front wall of the combustion chamber.
- f. Make the electrical connections according to wiring diagrams specified in burner manufacturers manual. All wiring must be done in accordance with the local electrical code.

### **2. Oil Primary Control - Chimney Vent (Non Post Purge Control)**

The oil primary control with the solid state flame sensing circuit provides automatic, non-recycling control of oil burners. When used with the cadmium sulfide flame detector, the control will automatically control the oil heating system.

The primary control will stop the oil burner within a predetermined number of seconds if the fuel fails to ignite or if the flame goes out during operation. The oil burner will remain off until the reset button on the relay has been pushed.

***WARNING:*** *The reset must never be pressed more than once during a single flame failure.*

### **3. Oil Primary Control - Direct Vent (Post Purge Control)**

The oil primary control with the solid state flame sensing circuit provides interrupted ignition. Used in conjunction with a cadmium sulfide flame detector, the control will automatically control the oil burner.

The primary control will stop the oil burner within a predetermined number of seconds if the fuel fails to ignite or if the flame goes out during operation. The oil burner will remain off until the reset button on the relay has been pushed.

***WARNING:*** *The reset must never be pressed more than once during a single flame failure.*

Post-purge is provided to ensure that the boiler fires at maximum efficiency and dependability throughout the heating season.

Post-purge of the oil burner is controlled through the electronic circuitry supplied. Post-purge timing is variable. The factory set post-purge timing is at approximately one minute. It is recommended that it be left at this setting. In no case should the post purge timing be reduced to less than 1 minute.

Length of Vent Kit	Minimum Post Purge Time
0 - 10 Feet	1 Minute
10.1 - 15 Feet	1 Minute
15.1 - 20 Feet	2 Minutes

Times are approximate and should be considered minimum settings for the length of intake pipe installed.

The length of post-purge may be increased on those units using the Beckett AFII or Riello BF-5 oil burners to any value up to its maximum setting if field conditions require a longer purge cycle.

The length of post-purge on the Carlin burner is not adjustable. The post purge timing on the Carlin burner is 90 seconds.

#### **4. Hydronic Control**

This control is installed in the 3/4" fitting on top of the boiler. These immersion type controls are used with forced hydronic heating systems. This model provides high and low limits for maintaining minimum boiler water temperature and circulator controls. This control can also be used for multi-zone control by using a separate circulator and an R845 relay for each zone. The primary control is factory wired to the hydronic control. These controls, working as a system, will prevent the circulator operation if the water temperature is below a predetermined low level. Likewise, if the water level reaches a predetermined high limit, the burner will automatically shut off.

## **K) SEQUENCE OF OPERATION**

When room temperature or the indirect water heater temperature falls below the thermostat setting, the thermostat calls for heat starting the burner and circulating pump. The burner and pump continue to operate until room heating requirements are satisfied.

If the boiler high limit is reached the burner will shut off with the circulator continuing to operate.

If the thermostat continues to call for heat after the boiler temperature falls below the high limit setting the burner will restart.

It is recommended that the indirect water heater be wired so that when its thermostat calls for heat the flow of heat to the rest of the house is turned off. Consult the wiring diagrams from the indirect hot water heater manufacturer for wiring details.

## **L) FUEL SYSTEM**

### **1. Fuel Units**

**NOTE:** Pump pressure 140 PSI for Beckett and Carlin, 175 PSI for Beckett NX, and 150 PSI for Riello.

- a. Burners are commonly fitted with a single stage fuel unit. A single stage unit may be connected with a supply line only, when the fuel supply is level with or above the burner. When the burner is above the oil level, a return line should be provided between the fuel unit and the tank. A “bypass” plug in the fuel unit is then required. The return line automatically purges air from fuel units and returns it to the tank.
- b. Two stage fuel unit. If the height difference between the burner and the fuel supply level exceeds 10 ft., a two stage unit should be used, and a return line should be installed.

### **2. Tubing**

Use continuous heavy walled copper tubing with flare fittings only. Locate fittings in accessible locations. If possible, tubing should be installed under the floor. Running tubing against boiler casings or across ceiling or floor joints should be avoided.

### **3. In-Line Oil Filter**

The oil filter should be of a generous capacity. It should be located inside the building between the tank shut off valve and the burner. A shut off valve and the oil filter should be located as close to the burner as possible for ease of servicing.

### **4. Oil Shut Off Valve**

Install manual oil shut off valves at the burner and near the tank on the supply line. Both valves should be easily accessible.

## **M) FLUE SYSTEM - CHIMNEY VENT APPLICATIONS**

### **1. General**

**NOTE:** *An oil fired unit shall be connected to a flue having sufficient draft at all times to assure proper operation.*

### **2. Draft**

The draft regulator should be installed in accordance with the manufacturers instructions. Set the draft to negative .02 to .04 inches W.C. in the stack.

### **3. Roof Clearances**

The flue gas exit of the venting system should be at least 3 feet above the highest point where it passes through the roof and at least 2 feet higher than any portion of a building with 10 feet of the venting system.

### **4. Chimney Connectors**

The horizontal length of a chimney connector should not exceed 10 feet unless a draft booster is used. The connector should be pitched upward at least 1/4 inch to the foot. Use only high quality lock seam smoke pipe. Each joint should be securely fastened with sheet metal screws. Chimney connectors should be positioned to the shortest possible run of smoke pipe to the chimney.

### **5. Vent Cap**

Install a U.L. listed vent cap where the possibility of down drafts exist.

### **6. Boiler Venting**

This boiler must be vented into a properly sized chimney, or into an Underwriters Laboratories Inc. listed venting device which is capable of maintaining the specified draft requirements.

As indicated in this manual, chimney sizes, draft requirements and other additional service and installation requirements are essential for safe and proper operation of the boiler.

Only a trained experienced serviceman should attempt the installation or service of any boiler and or venting device.

All venting installations must comply with the recommendations of the venting manufacturer and with all state and local codes.

### **7. Vent Damper**

A vent damper has been provided with the chimney vent models. The damper automatically opens when the boiler is in operation and closed when the burner is shut off and not operating. The damper reduces heating loss that occurs during the off cycle period. Ensure that the vent damper is oriented in the correct direction of flow (check arrow stamped on body of damper) and connect to the boiler flue outlet using sheet metal screws. Wire according to vent damper manufacturers instructions.

## **N) WIRING**

All internal electrical wiring is completed at the factory on packaged boilers. All external wiring must conform with the National Electric Code and local codes. Refer to wiring diagrams for all field wiring.

1. Field connections should be protected with a 15 amp fuse.
2. Install the room thermostat on an inside wall away from cold drafts, windows, or heat from fireplaces, appliances, or sunlight. Connect the thermostat leads to the "TT" terminals on the circulator control.

## O) WARRANTY

**NOTE:** *The limited lifetime warranty is not applicable unless these installation instructions are followed.*

# OPERATION

## A) START UP

**CAUTION:** *DO NOT START UNLESS CLEAN OUT DOORS ARE IN PLACE.*

1. Make sure service switch to boiler is off.
2. Make sure boiler has been filled with enough water until the entire system has been purged and desired pressure is obtained.
3. Check to make sure the oil storage tank is filled with No. 2 heating oil.
4. Make sure all manual shut off valves in the fuel system are open.
5. Set operating controls at 160°F.
6. Set limit switch at 180°F.
7. Install a pressure gauge in the 1/8" gauge port or nozzle port of the fuel pump. Do not take readings at the bleed valve port.

**NOTE:** *The pressure should be set per Installer/Serviceman Label.*

8. Adjust the burner air band and air shutter in accordance with Installer/serviceman Label.
9. Push the safety reset button on the primary control and release. Adjust the thermostat to call for heat. Turn the service switch to the on position. Bleed the fuel unit. If burner fails to start, refer to the trouble shooting guide in this manual.
10. With the burner running, bleed the fuel unit again until all air is eliminated from lines. Close and tighten the bleed port.
11. Check all lines and plugs for oil leaks and eliminate.

## B) START UP ADJUSTMENTS

### 1. Equipment Required

- a. CO2 analyzer
- b. Draft gauge.
- c. Fuel pressure gauge.
- d. Stack thermometer.
- e. Smoke tester.

## **2. Burner Adjustments**

Allow the burner to operate steadily for at least 15 minutes. Check the burner settings according to the installer/serviceman labels for boilers at the end of this manual, and make the following adjustments:

- a. *Sampling Hole* - A 1/4" hole in the flue pipe is provided. All test readings should be taken from this point.
- b. *In The Stack Draft* - Take a draft reading from the flue pipe sampling hole. Adjust the barometric draft regulator to -.02" in the stack. In tall chimneys a second draft regulator may be required in the flue pipe to regulate draft under high draft conditions.
- c. *Overfire Draft* - Take a draft reading from the draft port located to the left of the burner. Compare those to the installer/serviceman label. Reinstall the draft port plug after all readings have been taken.
- d. *Pump Pressure* - Adjust the pump discharge pressure per value on serviceman label.
- e. *Combustion Air* - Reduce the air supply to allow just sufficient air for clean combustion. This is accomplished by loosening the lock screws on the air shutter, and closing the air shutter until a trace of smoke is recorded. Take a CO<sub>2</sub> sample. Open the air shutter lowering CO<sub>2</sub> about 1-1/2% to 2%. A zero smoke reading should result. If this adjustment cannot be obtained, refer to the trouble shooting section in this manual.

## **3. Instructing the Homeowner**

The care and operation of the boiler should be explained to the homeowner, including care of the burner, how to adjust the thermostat, necessity of air supply to the burner, and the simple checks to make before calling the serviceman if the burner fails to operate automatically.

## **C) BURNER SERVICING**

### **1. Burner Components**

If a replacement part is necessary, use only the part specified on the burner parts list in this manual. Specify the part number and description when ordering. (See included burner literature).

### **2. Nozzles**

Use only the correct nozzle specified on the "Installer/Serviceman" decal located on front boiler jacket. Be extremely careful not to touch the nozzle orifice to avoid scratches or dirt which may cause leaks or effect the oil spray pattern.

### **3. Electrode Settings**

The electrode setting is critical for proper ignition of the fuel. Check to be sure electrode settings comply with the specifications.

### **4. Fan and Blower Housing**

The fan and blower housing should be kept clean from lint and dirt. If the boiler is located near an unvented dryer, special care must be taken so that lint does not block air passages in the burner and proper combustion air is provided.

## **Maintenance/Qualified Heating Technician Only**

### **A) VENT SYSTEM**

***DANGER: ESCAPING GASES ARE DANGEROUS. THE ENTIRE FLUE AND VENTING SYSTEM SHOULD BE INSPECTED AT LEAST ONCE A YEAR BY A QUALIFIED SERVICEMAN.***

At the beginning of each heating season, boiler flue passages and the oil burner should be checked for cleanliness and if necessary they should be cleaned. The boiler may be cleaned from either the front or rear by removing the jacket panel and the front or rear door. The following procedure is required for inspection and cleaning of the boiler flue passages.

- 1) Turn off all electrical power to the boiler before inspecting and cleaning.
- 2) Remove either the boiler front or rear jacket panel.
- 3) Remove the 8 brass nuts which hold on the door. The front door swings open for access. The rear door must be completely removed.
- 4) Remove the fire tube baffles.
- 5) If required remove scale and any soot deposits with a flexible 2" flue brush. Be careful not to damage the front or rear insulation.
- 6) Replace the fire tube baffles.
- 7) Reinstall the door and tighten with the 8 brass nuts.
- 8) Reinstall the jacket panel.
- 9) Turn on all electrical power to the boiler.

### **D) OIL BURNER**

- 1) Thoroughly brush clean the burner fan blades. Only with clean fan blades is proper combustion air delivery possible.
- 2) Clean nozzle assembly and all air handling parts.
- 3) Check spacing and condition of the ignition electrodes.
- 4) Nozzles should be inspected every year for plugged distributor slots or plugged orifices. If it is necessary to replace the nozzle, use only the specified nozzle to be sure that the replacement meets the spray pattern specifications of the burner.

### **E) WIRING**

Check the electrical wiring for damage or frayed insulation.

## Troubleshooting Guide/Qualified Heating Technician Only

### TROUBLE: BURNER DOES NOT START

SOURCE	PROCEDURE	CAUSES	REMEDY
<i>Thermostat</i>	Check Thermostat	Thermostat set too low.	Turn thermostat up.
		Thermostat on "off" or "cool."	Switch to heat.
		Open thermostat wires.	Repair or replace wires.
		Loose thermostat connectors.	Tighten connection.
		Faulty thermostat.	Replace thermostat.
		Thermostat not level.	Level thermostat.
<i>Circuit Overloads</i>	Check burner motor overload switch. (If equipped)	Burner motor tripped on overload.	Push reset button.
	Check primary control safety switch.	Primary tripped on safety.	Reset safety switch.
<i>Power</i>	Check boiler disconnect switch and main disconnect switch.	Switch open.	Close switch.
		Tripped breaker or blown fuse.	Reset breaker or replace fuse.
<i>Cad Cell</i>	Jump the FF terminals on primary control, if the burner starts, fault is in detector circuit.	Open cad cell wires.	Repair or replace wire.
		Dirty cell face.	Clean or replace face.
		Faulty cad cell.	Replace cad cell.
	Check resistance across cad cell.	If 400-600 ohms cell is bad.	Replace cad cell.
<i>Primary Control</i>	Check for line voltage between the black and white leads. No voltage indicates no power to the control.	Limit control switch open	Check limit setting.
			Jump terminals - if burner starts replace control.
		Open circuit between limit control and disconnect switch.	Repair circuit.
		Low line voltage or power failure	Call utility company.
	Check for line voltage between orange and white leads. No voltage indicates a faulty control.	Defective control.	Replace control.
<i>Burner</i>	Check for voltage at the black and white leads to the burner motor. Voltage indicates power to motor and a fault in the burner.	Pump seized.	Turn off power to burner. Rotate blower by hand, check for excessive drag. Replace fuel unit or blower wheel.
		Blower wheel binding.	
		Burner motor defective.	Replace burner motor.

*When checking burner adjustments always use instruments.*



# **TROUBLE: BURNER STARTS BUT DOES NOT ESTABLISH FLAME**

<b>SOURCE</b>	<b>PROCEDURE</b>	<b>CAUSES</b>	<b>REMEDY</b>
<i>Oil Supply</i>	Check tank for oil.	Empty tank.	Fill tank.
	Check for water in oil tank using a dip stick coated with litmus paste.	Water in oil tank.	Strip tank of water exceeding 2" in depth.
	Listen for pump whine.	Fuel supply valve closed.	Open valve.
<i>Oil Line and Filter</i>	Open pump bleed port and start burner. Milky oil or no oil indicates loss of prime.	Air leak in fuel system.	Repair leak, using only flared fittings. Do not use Teflon tape on oil fittings.
	Listen for pump whine.	Oil filter plugged.	Replace filter cartridge.
		Plugged pump strainer.	Clean Strainer.
		Restriction in oil line.	Repair oil line.
<i>Oil Pump</i>	Install pressure gauge in port of fuel pump. Pressure should be according to the installer/serviceman labels for Series I & II boilers.	Pump worn - low pressure. Motor overloads.	Replace pump.
		Coupling worn or broken.	Replace coupling.
		Pump discharge pressure set too low.	Set pressure according to the installer/serviceman labels for Series I & II boilers.
		No spark or weak spark.	
<i>Ignition Transformer</i>	Connect transformer leads to line voltage. Listen for spark. Check that transformer terminals are not arcing with buss bars. Check that transformer is properly grounded.	Line voltage below 102V.	Replace transformer.
			Call utility company.
<i>Ignition Electrodes</i>	Remove and inspect drawer assembly.	Carboned and shorted electrodes.	Clean electrodes.
		Eroded electrode tips.	Replace and reset electrodes.
		Incorrect electrode settings.	
		Cracked porcelain insulators.	Replace and reset electrodes.
<i>Nozzle</i>	Check for faulty nozzle.	Plugged orifice or distributor. Plugged nozzle strainer. Poor spray pattern.	Replace nozzle with nozzle according to the installer/serviceman labels for Series I & II boilers.
	Inspect nozzle for correct size and specifications.	Incorrect nozzle installed.	Install correct nozzle.
<i>Combustion Air Adjustments</i>	See "Burner Adjustment Instructions" in this manual.	Air shutter open too far.	Decrease air shutter setting.
		Air band open too far.	Decrease air band opening.

***When checking burner adjustments always use instruments.***

**TROUBLE: BURNER FIRES, BUT THEN FAILS ON SAFETY**

<b>SOURCE</b>	<b>PROCEDURE</b>	<b>CAUSES</b>	<b>REMEDY</b>
<i>Cad Cell</i>	Check cad cell with ohmmeter. If more than 2000 ohms, cad cell is defective or dirty.	Faulty or dirty cad cell	Clean or replace cad cell.
<i>Primary Control</i>	After burner fires, open cad cell circuit if flame looks OK. If burner continues to operate, fault is in primary control.	Faulty primary control	Replace primary control.
<i>Heat Exchanger Restriction</i>	Inspect heat exchanger.	Plugged heat exchanger.	Clean out heat exchanger.
<i>Burner Motor</i>	Burner motor trips on overload. Turn off power and rotate blower by hand to check for excessive drag.	Line voltage below 102V	Call utility company.
		Faulty motor.	Replace motor.
		Pump or blower overloading motor.	Replace blower or pump.

**TROUBLE: TOO MUCH HEAT**

<b>SOURCE</b>	<b>PROCEDURE</b>	<b>CAUSES</b>	<b>REMEDY</b>
<i>Circulator</i>	Check to see if operating control is working properly.	Circulator does not stop running.	Repair operating control.
<i>Thermostat</i>	Check thermostat settings and calibration.	Thermostat set too high.	Reset thermostat.
		Thermostat defective	Replace thermostat.
		Thermostat out of calibration.	Recalibrate. Check level.
<i>Flow Valve</i>	Check to see if flow valve is operating properly.	Flow valve dirty and stuck.	Clean flow valve.
		Flow valve defective.	Replace flow valve.

*When checking burner adjustments always use instruments.*

## TROUBLE: BURNER FIRES, BUT THEN LOSES FLAME

SOURCE	PROCEDURE	CAUSES	REMEDY
<i>Poor Fire</i>	Inspect flame for stability.	Unbalanced fire.	Replace nozzle with specified nozzle.
		Excessive draft.	Reduce draft setting.
		Insufficient draft.	Increase draft.
		Insufficient combustion air sources.	Increase combustion air sources.
<i>Oil Supply</i>	If burner loses flame prior to the primary control locking out, fault is in fuel system.	Air leak in fuel system.	Repair leak - use only flare fittings.
		Water in oil tank.	Strip tank of water exceeding 2" in depth.
		Fuel supply valve closed.	Open valve.
		Restriction in oil line.	Clear oil line restriction.
		Plugged fuel filter.	Replace filter cartridge.
		Plugged pump strainer.	Clean Strainer.
		Cold oil.	Use #1 heating oil.
<i>Combustion Air</i>	Reduce combustion air supply.	Too much combustion air.	Close air band and air to raise CO <sub>2</sub> . Check with instruments.
<i>Pump</i>	Install pressure gauge in gauge port of fuel pump. Pressure should be according to installer/serviceman labels for Series I & II boilers .	Pump discharge pressure incorrectly set.	Set pressure according to installer/serviceman labels for Series I & II boiler.
		Coupling worn or broken.	Replace coupling.
		Pump worn - low pressure motor overloads.	Replace pump.
<i>Excessive Draft</i>	Take a draft reading. Draft should be according to installer/serviceman labels for Series I & II boilers starting.	Incorrect draft setting.	Reduce setting. Install second draft regulator if necessary.
<i>Poor Flue Gas Sample</i>	Insert CO <sub>2</sub> probe into heat exchanger tube. If reading is greater by 1/2% or more, sample was being diluted near flue box.	Leak in flue system.	Sample CO <sub>2</sub> in heat exchanger.
			Seal flue system leak.
<i>Nozzle</i>	Check for faulty nozzle.	Plugged orifice or distributor.	Replace nozzle with specified nozzle.
		Plugged nozzle strainer.	
		Poor spray pattern.	

*When checking burner adjustments always use instruments.*

## TROUBLE: BURNER FIRES, BUT PULSATES

SOURCE	PROCEDURE	CAUSES	REMEDY
<i>Draft</i>	Take a draft reading. Draft should be according to installer/service-man labels for Series I & II boiler.	Down drafts.	Install vent cap.
		Insufficient draft.	Increase draft setting.
		Excessive draft.	Reduce draft settings, install second draft regulator if necessary.
<i>Draft Regulator</i>	Inspect draft regulator for correct location on flue system.	Improper installation.	Move draft regulator to correct location.
<i>Combustion Air</i> See Table 1.	Inspect installation for combustion air provisions.	Improper installation.	Provide sufficient sources of air for combustion.
	Open air band wide and take CO <sub>2</sub> reading.	Improper adjustment.	Adjust CO <sub>2</sub> level - start with air band wide open. Use instrument.
<i>Oil Supply</i>	Bleed pump; inspect for air leaks or water contamination.	Air leak in fuel system. Compression fittings.	Repair leak - use only flare joints.
		Water in oil tank.	Strip tank of water exceed 2" in depth.
<i>Pump Pressure</i>	Install pressure gauge in gauge port of fuel pump. Pressure should be according to installer/serviceman labels for Series I & II boiler.	Pump discharge pressure incorrectly set.	Set pressure according to installer/serviceman labels for Series I & II boiler.
		Coupling worn or broken.	Replace coupling.
		Pump worn - low pressure motor overloads.	Replace pump.
<i>Nozzle</i>	Check for faulty nozzle.	Plugged orifice or distributor.	Replace nozzle with nozzle specified on burner housing.
		Plugged nozzle strainer.	
		Poor spray pattern.	
<i>Heat Exchanger Restrictions</i>	Inspect heat exchanger.	Plugged heat exchanger.	Clean out heat exchanger.

***When checking burner adjustments always use instruments.***

**TROUBLE: INSUFFICIENT HEAT**


<b>SOURCE</b>	<b>PROCEDURE</b>	<b>CAUSES</b>	<b>REMEDY</b>
<i>Circulator</i>	Check if circulator is operational.	Coupling worn or broken.	Replace coupling.
		Pump binding.	Replace pump.
		Circulator motor burned out.	Replace circulator motor.
		Wiring from operating control defective.	Repair wiring.
		Operating control defective.	Repair or replace operating control.
	Check if circulator is correct size.	Circulator too small.	Replace with proper circulator.
	Check if circulator is up to speed; check if voltage to circulator is sufficient.	Circulator defective.	Repair circulator.
		Insufficient voltage.	Call utility company.
<i>Thermostat</i>	Check thermostat settings.	Settings too low.	Increase setting.
	Check thermostat location.	Bad location due to heat build up.	Move thermostat to a better location.
	Check thermostat calibration.	Out of calibration.	Recalibrate. Level thermostat.
<i>Flow Valve</i>	Check flow valve for sticking in partially closed position.	Flow valve not opening fully.	Clean or replace flow valve.
<i>Radiation</i>	Check for air in radiators.	Radiators airbound.	Bleed radiators.
	Check to see if radiators are sized properly.	Radiators inadequate.	Install adequate radiation.
<i>Boiler</i>	Determine structure heat load.	Boiler too small.	Additional heating capacity.
<i>Piping</i>	Check to see if piping is sized properly.	Piping inadequate.	Install adequate piping.
<i>Heat Exchanger</i>	Check heat exchanger for soot or scale accumulation.	Insufficient heat transfer.	Clean heat exchanger.
<i>Burner</i>	Check pump pressure with pressure gauge.	Insufficient pump pressure.	Increase pressure according to installer/serviceman labels for Series I & II boilers.
<i>Nozzle</i>	Check nozzle for size and spray angle.	Wrong nozzle installed.	Install specified nozzle.
	Check for faulty nozzle.	Nozzle underfiring due to defective nozzle.	Replace nozzle.

**TROUBLE: HIGH NET STACK TEMPERATURES**

<b>SOURCE</b>	<b>PROCEDURE</b>	<b>CAUSES</b>	<b>REMEDY</b>
<i>Nozzle</i>	Check pump pressure with pump gauge.	Nozzle overfiring due to high pump pressure.	Reduce pump pressure according to installer/serviceman labels for Series I & II boilers starting on page 30.
<i>Heat Exchanger</i>	Check heat exchanger surfaces for soot or scale fouling.	Heat exchanger fouled.	Clean heat exchanger.
<i>Baffles</i>	Check baffles installed.	Baffles not installed.	Install baffles.

## Parts List LM75/85 and LM100/110/125 Boilers

Item No.	Description	Part Number LM75/100	Part Number LM110/135
1	Fire Tube Baffle	817100	280274
2	Combustion Liner	337804	337804
3	Burner Door Steel	280264	280264
4	Insulation for Steel Burner Door	337818	337818
5	Target Wall Insulation	337816	337816
6	Rear Door	280269	280269
7	LM75/85 Jacket Top	501015	
8	LM75/85 Jacket Kit	501016	
8	LM100/125 Jacket Kit		502252
9	Aquasmart	552112	552112
	Aquasmart - Well	552146	552146
	Aquasmart - Sensor/Element	552145	552145
	Hydrolevel	552139	552139
	Hydrolevel - Well	552821	552821
10	Temperature/Altitude Gauge	559560	559560
11	Relief Valve	575020	575020
	Aquastat L4006 - Direct Vent Units Only	552012	552012

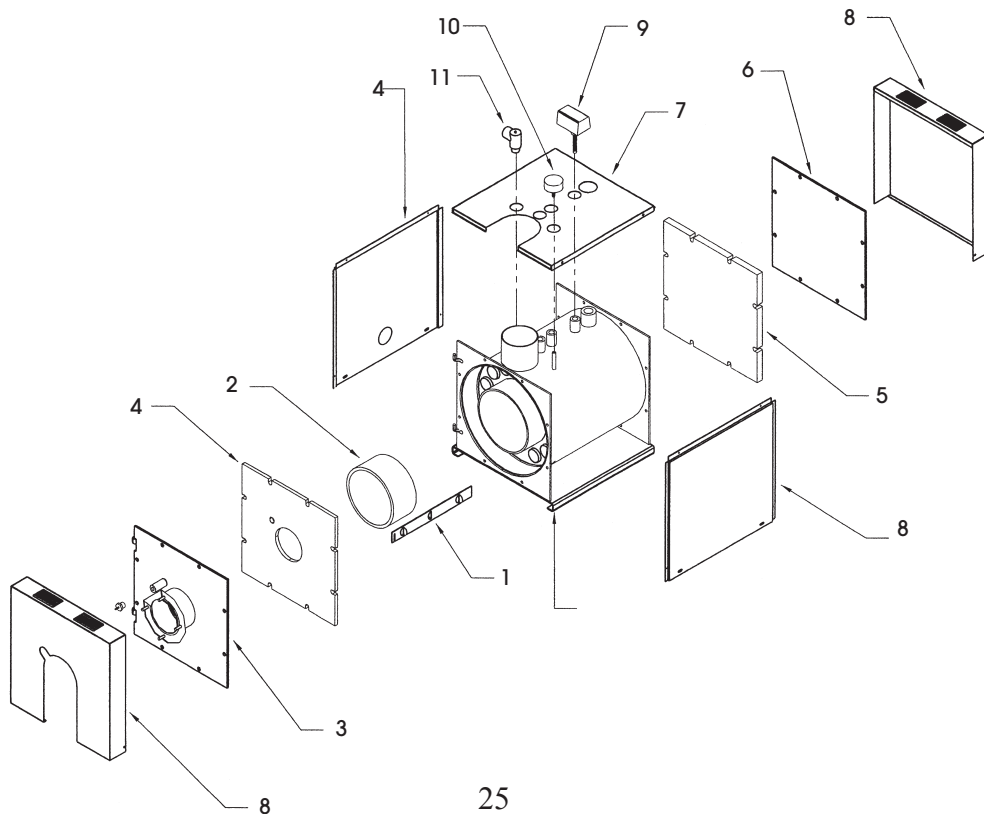

## Preliminary Settings

### INSTALLER/SERVICEMAN

Model Number	LM-75	LM-85
Burner Type	Riello	Riello
Burner Model	F5	F5
Nozzle Type	.65 60W	0.75 60W
Pump Pressure PSI	150	150
Head/Pin Position	2.0	2.0
Air Band	N/A	N/A
Air Shutter	1.75	2.5
Draft Over Fire	0 to +.1"	0 to +.1"
Draft In Stack	-0.02"	-0.02"
CO <sub>2</sub> Reading	10-11.5%	10-11.5%
Smoke Reading	ZERO	ZERO

#### NOTICE

Above settings are approximate. Final adjustments to be made with proper test equipment. Be sure all oil lines are air free and the use of flare fittings is recommended. See installation/service manual for detailed information.

### INSTALLER/SERVICEMAN

Model Number	LM-75	LM-85
Burner Type	Beckett	Beckett
Burner Model	AFII	AFII
Nozzle Type	.65 70B	0.75 70B
Pump Pressure PSI	140	140
Head/Pin Position	0	0
Air Band	2.0	3.0
Air Shutter	N/A	N/A
Draft Over Fire	0 to +.1"	0 to +.1"
Draft In Stack	-0.02"	-0.02"
CO <sub>2</sub> Reading	10-11.5%	10-11.5%
Smoke Reading	ZERO	ZERO

#### NOTICE

Above settings are approximate. Final adjustments to be made with proper test equipment. Be sure all oil lines are air free and the use of flare fittings is recommended. See installation/service manual for detailed information.

### INSTALLER/SERVICEMAN

Model Number	LM-75	LM-85
Burner Type	Carlin	Carlin
Burner Model	EZ-1	EZ-1
Nozzle Type	.65 60°A	0.75 60°A
Pump Pressure PSI	140	140
Head/Pin Position	0.75	0.75
Air Band	0.60	0.75
Air Shutter	N/A	N/A
Draft Over Fire	0 to +.1"	0 to +.1"
Draft In Stack	-0.02"	-0.02"
CO <sub>2</sub> Reading	10-11.5%	10-11.5%
Smoke Reading	ZERO	ZERO

#### NOTICE

Above settings are approximate. Final adjustments to be made with proper test equipment. Be sure all oil lines are air free and the use of flare fittings is recommended. See installation/service manual for detailed information.

### INSTALLER/SERVICEMAN

Model Number	LM-75	LM-85
Burner Type	Beckett	Beckett
Burner Model	AFG	AFG
Nozzle Type	.65 60A	0.75 60A
Pump Pressure PSI	140	140
Head/Pin Position	V1	V1
Air Band	0 (closed)	4
Air Shutter	4	10 (open)
Draft Over Fire	0 to +.1"	0 to +.1"
Draft In Stack	-0.02"	-0.02"
CO <sub>2</sub> Reading	10-11.5%	10-11.5%
Smoke Reading	ZERO	ZERO

\*Equipped with low firing rate baffle.  
AFG burners standard with delay oil valve.

#### NOTICE

Above settings are approximate. Final adjustments to be made with proper test equipment. Be sure all oil lines are air free and the use of flare fittings is recommended. See installation/service manual for detailed information.



## INSTALLER/SERVICEMAN

Model Number	LM-75	LM-85
Burner Type	Beckett	Beckett
Burner Model	NX	NX
Nozzle Type	.60 60°B	0.70 60°B
Pump Pressure PSI	175	175
Head/Pin Position	2.5	3.0
Air Band	N/A	N/A
Air Shutter	N/A	N/A
Draft Over Fire	0 to +.1"	0 to +.1"
Draft In Stack	-0.020"	-0.020"
CO <sub>2</sub> Reading	10-11.5%	10-11.5%
Smoke Reading	ZERO	ZERO

### NOTICE

Above settings are approximate. Final adjustments to be made with proper test equipment. Be sure all oil lines are air free and the use of flare fittings is recommended. See installation/service manual for detailed information.

## INSTALLER/SERVICEMAN

Model Number	LMD-75	LMD-85
Burner Type	Riello	Riello
Burner Model	BF5	BF5
Nozzle Type	.65 60W	0.75 60W
Pump Pressure PSI	150	150
Head/Pin Position	2.0	2.0
Air Band	N/A	N/A
Air Shutter	3.25	3.75
Draft Over Fire	0 to +.1"	0 to +.1"
Draft In Stack	0 to +.1"	0 to +.1"
CO <sub>2</sub> Reading	10-11.5%	10-11.5%
Smoke Reading	ZERO	ZERO

### NOTICE

Above settings are approximate. Final adjustments to be made with proper test equipment. Be sure all oil lines are air free and the use of flare fittings is recommended. See installation/service manual for detailed information.

## INSTALLER/SERVICEMAN

Model Number	LMD-75	LMD-85
Burner Type	Beckett	Beckett
Burner Model	AFII	AFII
Nozzle Type	.65 70B	0.75 70B
Pump Pressure PSI	140	140
Head/Pin Position	0	0
Air Band	2.0	3.0
Air Shutter	N/A	N/A
Draft Over Fire	0 to +.1"	0 to +.1"
Draft In Stack	0 to +.1"	0 to +.1"
CO <sub>2</sub> Reading	10-11.5%	10-11.5%
Smoke Reading	ZERO	ZERO

### NOTICE

Above settings are approximate. Final adjustments to be made with proper test equipment. Be sure all oil lines are air free and the use of flare fittings is recommended. See installation/service manual for detailed information.

## INSTALLER/SERVICEMAN

Model Number	LMD-75	LMD-85
Burner Type	Carlin*	Carlin*
Burner Model	EZ-1	EZ-1
Nozzle Type	.65 60°A	0.75 60°A
Pump Pressure PSI	140	140
Head/Pin Position	0.75	0.75
Air Band	0.65	0.75
Air Shutter	N/A	N/A
Draft Over Fire	0 to +.1"	0 to +.1"
Draft In Stack	0 to +.1"	0 to +.1"
CO <sub>2</sub> Reading	10-11.5%	10-11.5%
Smoke Reading	ZERO	ZERO

\*Requires Carlin Air Intake Adapter

### NOTICE

Above settings are approximate. Final adjustments to be made with proper test equipment. Be sure all oil lines are air free and the use of flare fittings is recommended. See installation/service manual for detailed information.

## INSTALLER/SERVICEMAN

Model Number	LMD-75	LMD-85
Burner Type	Beckett	Beckett
Burner Model	NX	NX
Nozzle Type	.60 60°B	0.70 60°B
Pump Pressure PSI	175	175
Head/Pin Position	2.0	3.0
Air Band	N/A	N/A
Air Shutter	N/A	N/A
Draft Over Fire	0 to +.1"	0 to +.1"
Draft In Stack	0 to +.1"	0 to +.1"
CO <sub>2</sub> Reading	10-11.5%	10-11.5%
Smoke Reading	ZERO	ZERO

### NOTICE

Above settings are approximate. Final adjustments to be made with proper test equipment. Be sure all oil lines are air free and the use of flare fittings is recommended. See installation/service manual for detailed information.

## INSTALLER/SERVICEMAN

Model Number	LM-100	LM-110	LM-125
Burner Type	Riello	Riello	Riello
Burner Model	F5	F5	F5
Nozzle Type	0.85 60A	.90 60A	1.00 60A
Pump Pressure PSI	150	150	150
Head/Pin Position	2.0	2.0	3.0
Air Band	N/A	N/A	N/A
Air Shutter	3.25	3.50	3.75
Draft Over Fire	0 to +.2"	0 to +.2"	0 to +.2"
Draft In Stack	-0.02"	-0.02"	-0.02"
CO <sub>2</sub> Reading	10-11.5%	10-11.5%	10-11.5%
Smoke Reading	ZERO	ZERO	ZERO

### NOTICE

Above settings are approximate. Final adjustments to be made with proper test equipment. Be sure all oil lines are air free and the use of flare fittings is recommended. See installation/service manual for detailed information.

## INSTALLER/SERVICEMAN

Model Number	LM-100	LM-110	LM-125
Burner Type	Carlin	Carlin	Carlin
Burner Model	EZ-1	EZ-1	EZ-1
Nozzle Type	0.85 60B	.90 60B	1.00 60B
Pump Pressure PSI	140	140	140
Head/Pin Position	.85/1.00	1.1/1.25	1.10/1.25
Air Band	.85	.90	1.25
Air Shutter	N/A	N/A	N/A
Draft Over Fire	0 to +.2"	0 to +.2"	0 to +.2"
Draft In Stack	-0.02"	-0.02"	-0.02"
CO <sub>2</sub> Reading	10-11.5%	10-11.5%	10-11.5%
Smoke Reading	ZERO	ZERO	ZERO

### NOTICE

Above settings are approximate. Final adjustments to be made with proper test equipment. Be sure all oil lines are air free and the use of flare fittings is recommended. See installation/service manual for detailed information.

## INSTALLER/SERVICEMAN

Model Number	LM-100	LM-110	LM-125
Burner Type	Beckett	Beckett	Beckett
Burner Model	AFG	AFG	AFG
Nozzle Type	0.85 60A	.90 60A	1.00 60A
Pump Pressure PSI	140	140	140
Head/Pin Position	V1	V1	V1
Air Band	CLOSED	1.5	2.0
Air Shutter	8 OPEN	10 OPEN	10 OPEN
Draft Over Fire	0 to +.2"	0 to +.2"	0 to +.2"
Draft In Stack	-0.02"	-0.02"	-0.02"
CO <sub>2</sub> Reading	10-11.5%	10-11.5%	10-11.5%
Smoke Reading	ZERO	ZERO	ZERO

### NOTICE

Above settings are approximate. Final adjustments to be made with proper test equipment. Be sure all oil lines are air free and the use of flare fittings is recommended. See installation/service manual for detailed information.

## INSTALLER/SERVICEMAN

Model Number	LM-100	LM-110	LM-125
Burner Type	Beckett	Beckett	Beckett
Burner Model	AFII	AFII	AFII
Nozzle Type	0.85 60B	.90 60B	1.00 60B
Pump Pressure PSI	140	140	140
Head/Pin Position	0	3	8
Air Band	3.75	4.5	5.0
Air Shutter	N/A	N/A	N/A
Draft Over Fire	0 to +.2"	0 to +.2"	0 to +.2"
Draft In Stack	-0.02"	-0.02"	-0.02"
CO <sub>2</sub> Reading	10-11.5	10-11.5	10-11.5
Smoke Reading	ZERO	ZERO	ZERO

### NOTICE

Above settings are approximate. Final adjustments to be made with proper test equipment. Be sure all oil lines are air free and the use of flare fittings is recommended. See installation/service manual for detailed information.

## INSTALLER/SERVICEMAN

Model Number	LM-100	LM-110	LM-125
Burner Type	Beckett	Beckett	Beckett
Burner Model	NX	NX	NX
Nozzle Type	0.75 60°B	0.85 60°B	.90 60°B
Pump Pressure PSI	175	175	175
Head/Pin Position	0.25	0.5	1.0
Air Band	N/A	N/A	N/A
Air Shutter	N/A	N/A	N/A
Draft Over Fire	0 to +.2"	0 to +.2"	0 to +.2"
Draft In Stack	-0.020"	-0.020"	-0.020"
CO <sub>2</sub> Reading	10-11.5%	10-11.5%	10-11.5%
Smoke Reading	ZERO	ZERO	ZERO

### NOTICE

Above settings are approximate. Final adjustments to be made with proper test equipment. Be sure all oil lines are air free and the use of flare fittings is recommended. See installation/service manual for detailed information.

## INSTALLER/SERVICEMAN

Model Number	LMD-100	LMD-110	LMD-125
Burner Type	Beckett	Beckett	Beckett
Burner Model	AFII	AFII	AFII
Nozzle Type	0.85 60°B	0.90 60°B	1.0 60°B
Pump Pressure PSI	140	140	140
Head/Pin Position	0	3	8
Air Band	3.75	4.5	5.0
Air Shutter	N/A	N/A	N/A
Draft Over Fire	0 to +.2"	0 to +.2"	0 to +.2"
Draft In Stack	0 to 0.1"	0 to 0.1"	0 to 0.1"
CO <sub>2</sub> Reading	10-11.5%	10-11.5%	10-11.5%
Smoke Reading	ZERO	ZERO	ZERO

### NOTICE

Above settings are approximate. Final adjustments to be made with proper test equipment. Be sure all oil lines are air free and the use of flare fittings is recommended. See installation/service manual for detailed information.

## INSTALLER/SERVICEMAN

Model Number	LMD-100	LMD-110	LMD-125
Burner Type	Beckett	Beckett	Beckett
Burner Model	NX	NX	NX
Nozzle Type	0.75 60°B	0.85 60°B	.90 60°B
Pump Pressure PSI	175	175	175
Head/Pin Position	3.50	3.75	4
Air Band	N/A	N/A	N/A
Air Shutter	N/A	N/A	N/A
Draft Over Fire	0 to +.2"	0 to +.2"	0 to +.2"
Draft In Stack	0 to 0.1"	0 to 0.1"	0 to 0.1"
CO <sub>2</sub> Reading	10-11.5%	10-11.5%	10-11.5%
Smoke Reading	ZERO	ZERO	ZERO

### NOTICE

Above settings are approximate. Final adjustments to be made with proper test equipment. Be sure all oil lines are air free and the use of flare fittings is recommended. See installation/service manual for detailed information.

## INSTALLER/SERVICEMAN

Model Number	LMD-100	LMD-110	LMD-125
Burner Type	Carlin	Carlin	Carlin
Burner Model	EZ-1	EZ-1	EZ-1
Nozzle Type	0.85 60°B	0.90 60°B	1.00 60°B
Pump Pressure PSI	140	140	140
Head/Pin Position	.85-1.00	1.10-1.25	1.10-1.25
Air Band	.85	.90	1.25
Air Shutter	N/A	N/A	N/A
Draft Over Fire	0 to +.2"	0 to +.2"	0 to +.2"
Draft In Stack	0 to 0.1"	0 to 0.1"	0 to 0.1"
CO <sub>2</sub> Reading	10-11.5%	10-11.5%	10-11.5%
Smoke Reading	ZERO	ZERO	ZERO

### NOTICE

Above settings are approximate. Final adjustments to be made with proper test equipment. Be sure all oil lines are air free and the use of flare fittings is recommended. See installation/service manual for detailed information.

## INSTALLER/SERVICEMAN

Model Number	LMD-100	LMD-110	LMD-125
Burner Type	Riello	Riello	Riello
Burner Model	BF-5	BF-5	BF-5
Nozzle Type	0.85 60°B	0.90 60°B	1.0 60°B
Pump Pressure PSI	150	150	150
Head/Pin Position	2	2	2
Air Band	N/A	N/A	N/A
Air Shutter	4.25	4.50	6.00
Draft Over Fire	0 to +.2"	0 to +.2"	0 to +.2"
Draft In Stack	0 to 0.1"	0 to 0.1"	0 to 0.1"
CO <sub>2</sub> Reading	10-11.5%	10-11.5%	10-11.5%
Smoke Reading	ZERO	ZERO	ZERO

### NOTICE

Above settings are approximate. Final adjustments to be made with proper test equipment. Be sure all oil lines are air free and the use of flare fittings is recommended. See installation/service manual for detailed information.





## BURNER SERVICE SET-UP RECORDS

	Initial Set Up 1	2	3	4	5
1. Date					
2. Model Number					
3. Firing Rate					
4. Pump Pressure*					
5. CO2					
6. "0" Smoke					
7. Gross Stack°F					
8. Draft Over Fire					
9. Replaced Filter Yes/No					
10. Replaced Nozzle Yes/No					
11. Clean Pump Filter Yes/No					
12. Inspect Coil Gasket					
13. Check for Leaks @ plugs/fittings					
14. Brush Clean Flue Tube Passages					
15. Vacuum Chamber/Flue Tubes					
16. Clean Blower Wheel					
17. Check/Set Electrodes					